
Lone+1.Foil



Important: Pre-press the garment 5 to 10 seconds and allow time for all moisture to evaporate! Any moisture left in the fabric will have a negative effect on the performance of the transfer process. Place T.One Transfer printed for the use with the T.Foil on the garment and press for 5 seconds. Note: On dark/black garment press 3 seconds only to avoid backgrounding!

Strip liner <u>right away hot on the heat press</u> in one slow steady motion in a very shallow angle!



PRESS








HIGH

STRIP



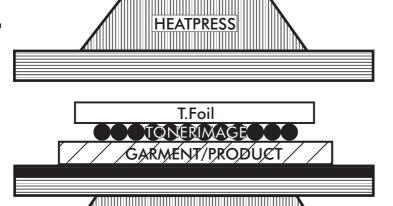

Important for Washing Durability of the garment: Cover the image with T.Seal and press again for 15 seconds for the final seal!

Note: First wash after minimum 48 hours only!