


# PLANX™

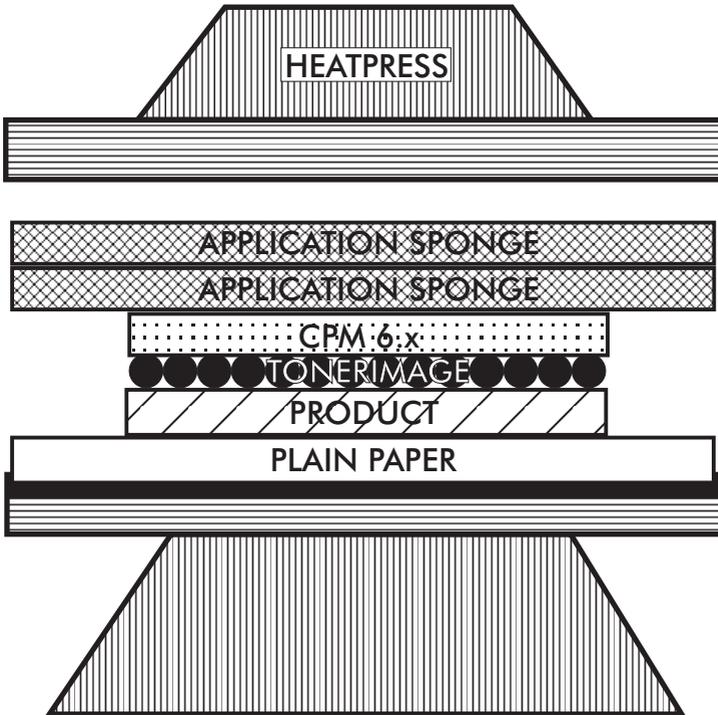


*Note: Spray mist of water on top of the Application Sponges to lightly moisten it. The moisture will turn into steam when pressed and will help to mold the CPM into uneven areas of the product.*



*Note: Press smaller PLANX products for 1 minute, larger products for 1.5 to 2 minutes. Let the surface cool down for 20 to 40 seconds (depending on how long you have pressed before) before stripping off the paper!*

## PRINT

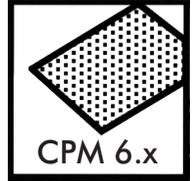


CPM 6.x



MIRROR

## PRESS

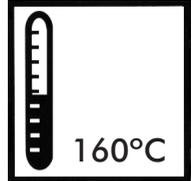

160°C




1-2 Min.



80-100 PSI  
HIGH

## PEEL

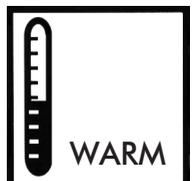

WARM