


T.One



Important: Pre-press the garment 5 to 10 seconds and allow time for all moisture to evaporate! Any moisture left in the fabric will have a negative effect on the performance of the transfer process.

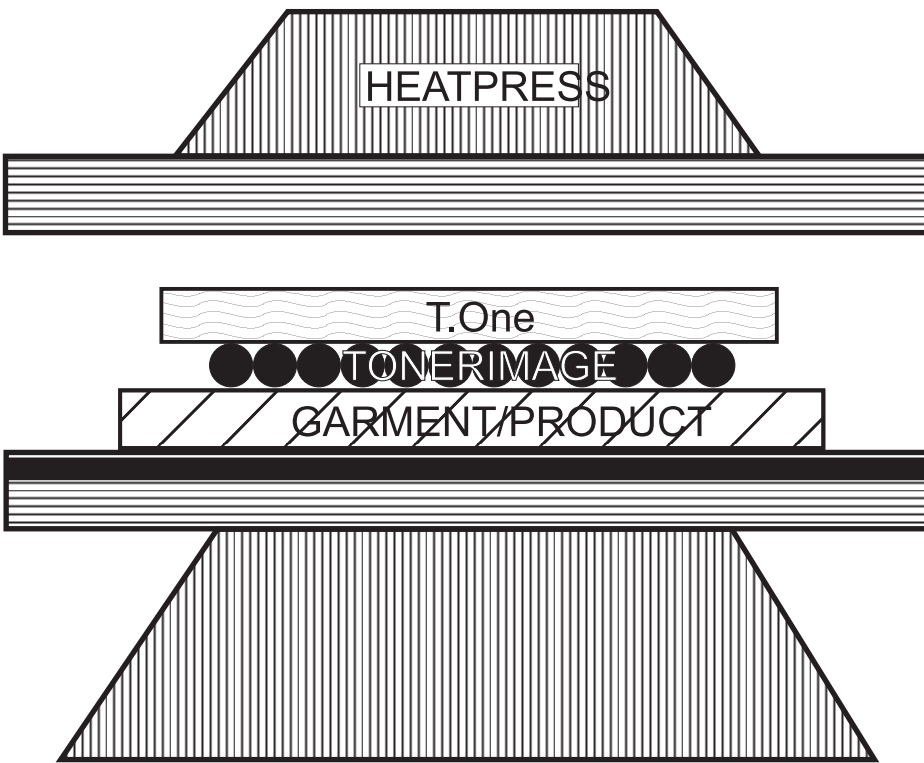


Note: Wait a few seconds before stripping off the base paper. Strip liner right on the heat press in one slow steady motion in a very shallow angle!




Important for Washing Durability of the garment: Cover the image with T.Seal and press again for 20 seconds for the final seal !

Note: First wash after minimum 48 hours only!

PRINT

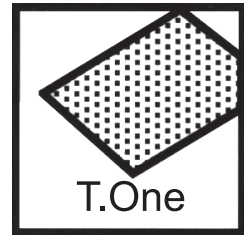

PRESS

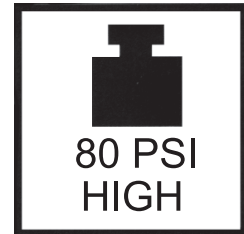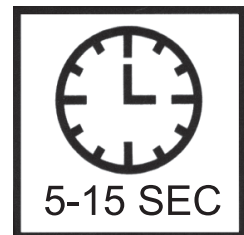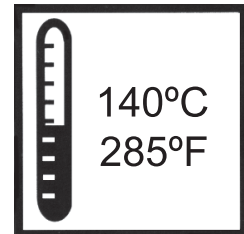

STRIP

